

3RTV Digital Video

Quick Reference Guide

Detailed information on how to use all the features of your new 3RTV Digital Video Service can be found in the Digital Video User's Guide that was provided to you during installation. The User's Guide is also available at www.3rivers.net/video/3rtv.



Input Buttons

- AUX (Auxiliary)
- DVD (DVD Player)
- AUD (Audio)
- TV
- STB (Set Top Box)

The device selection buttons tell your remote control whether you want to control your set top box or your television. Auxiliary, DVD and Audio buttons can be used to control these devices if you choose, provided the remote is programmed correctly.

Note: Your remote control must have the remote code programmed in before it can send the correct signals for your TV or other devices. A list is available at www.3rivers.net/video/3rtv. Contact a 3 Rivers customer service representative or your device manufacturer if you need more information.

To turn your TV on or off, press the TV button then the POWER button.

To turn your set top box on or off, press the STB button and then the Power button.

Note: It is not necessary or recommended to turn your set top box off.

If pressing Power turned the wrong device on or off, press the Power button again, press the appropriate device selection button (AUX, AUD, DVD, TV or STB) and press Power once more.

Onscreen Guide

Press Guide button once — ***All*** appears above channel numbers (shows all channels available)

Press Guide button twice — ***Subscribed*** appears above channel numbers (shows only channels in your subscription package)

Press Guide button three times — ***HD*** appears above channel numbers (shows only channels that are provided in High Definition)

Press Guide button four times — ***PPV*** appears above channel numbers (shows available Pay Per View programming)

Press Guide again to return to ***All***

You can start anywhere in this process and press **Guide** until desired lineup appears.

Detailed information on how the Onscreen Guide functions can be found on pages 12 through 23 in the Digital Video User's Guide that was provided to you during installation. The User's Guide is also available at www.3rivers.net/video/3rtv. If you have misplaced your User's Guide, we will be glad to replace it. Please call customer service.

DVR (Digital Video Recorder) Menu

Recorded Programs lists programs you have already recorded. Go here to watch, lock or delete these recorded programs.

To Record lists all Recording events you have scheduled, and allows you to cancel any future recording events.

Schedule Priority allows you to give priority for one series recording over another in the event of a scheduling conflict.

Schedule Event allows you to create a recording, reminder or auto tune event for individual or recurring programs.

Record History is a log of when recordings start, complete or are cancelled.

DVR Quick Recording Instructions

The fastest and easiest way to begin recording is to use the RECORD button on your remote control.

While watching a program, press Record. Recording will begin immediately.

You can also start a quick record while in the Guide screen.

1. Highlight a program you want to record using the Arrow Keys and press Record.
2. If the program is currently on, recording will begin immediately.
3. If the program comes on in the future, your system will record the program for you automatically. Even if your TV is turned off the recording will take place.

Detailed instructions for all DVR functions can be found on pages 28 through 35 in the Digital Video User's Guide that was provided to you during installation. The User's Guide is also available at www.3rivers.net/video/3rtv . If you have misplaced your User's Guide, we will be glad to replace it. Please call customer service.



1.800.796.4567 • www.3rivers.net