

REMOTE CONTROL CODE SEARCH INSTRUCTIONS

Following are instructions on how to program your remote control to devices other than your set top box using code search. You can also attempt to find the code for the device you want to program at www.urcsupport.com



Polaris 1090

SETUP CONTROL USING CODE SEARCH

 
Follow the instructions below to set up the remote to control the specific device you select.



1. Press the TV POWER key.



2. Press and hold SETUP until the TV POWER key blinks twice then release.



3. Type 9-9-1 on the number keys.



4. Press CH+ repeatedly until the TV turns ON or OFF.

5. Press SETUP key to save working code..



Atlas DVR 1056

SEARCHING FOR YOUR CODE

1. Turn on your TV.
2. On the remote control, press TV once; it blinks once. Then press and hold SET UP until the TV key blinks twice.
3. ENTER 9-9-1. The TV key blinks twice.
4. Press 1 (the device code digit for your TV). The TV key blinks twice. Aim the remote control at the TV and press PWR once.
5. Press and release the CH+ key continuously, then stop when the TV turns off.
NOTE: In the search mode, the remote control sends IR codes from its library to the selected device, starting with the most popular code first.

6. Press PWR. The TV should turn on, then press SET UP to lock the code.
NOTE: If the TV does not turn on during step 6, then slowly press and release CH- to go back through the codes, then press SET UP when the TV turns on.
7. To search for codes of your other devices, repeat steps 1 through 5, but substitute the appropriate key (e.g., AUX, DVD, CBL, or STB) for the device you are searching for.



Titan 2056

SEARCHING FOR YOUR CODE

If your home entertainment device does not respond to the Titan Remote Control after trying all of the codes listed for your brand, or if your brand is not listed at all, try searching for your code. For example, to search for a code for your TV:

 
1. Turn on your TV.
2. On the remote control, press TV once; it blinks once. Then press and hold SETUP until the TV key blinks twice.
3. Enter 9 9 1. The TV key blinks twice.
4. Enter one of the following four digits:



COMPONENT TYPE	COMPONENT ID #
Set-Top Boxes (Cable, Sat, etc.)	0
TV	1
DVD/VCR/DVR	2
Audio Devices	3


5. Aim the remote control at the TV and press POWER once.



6. Press and release the CH+ key continuously, then stop when the TV turns off.  **NOTE:** In the search mode, the remote control sends IR codes from its library to the selected device, starting with the most popular code first.

7. Press POWER. The TV should turn on, then press SETUP to lock in the code.

NOTE: If the TV does not turn on during step 6, then slowly press and release CH- to go back through the codes. Press

SETUP when the TV turns on. 

8. To search for the codes of your other devices, repeat steps 1 through 6, but substitute the appropriate key (e.g., AUX, DVD, AUD, or STB) for the device you are searching for.